COOKTOP PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

30" ELECTRIC RANGE
CERAN COOKTOP

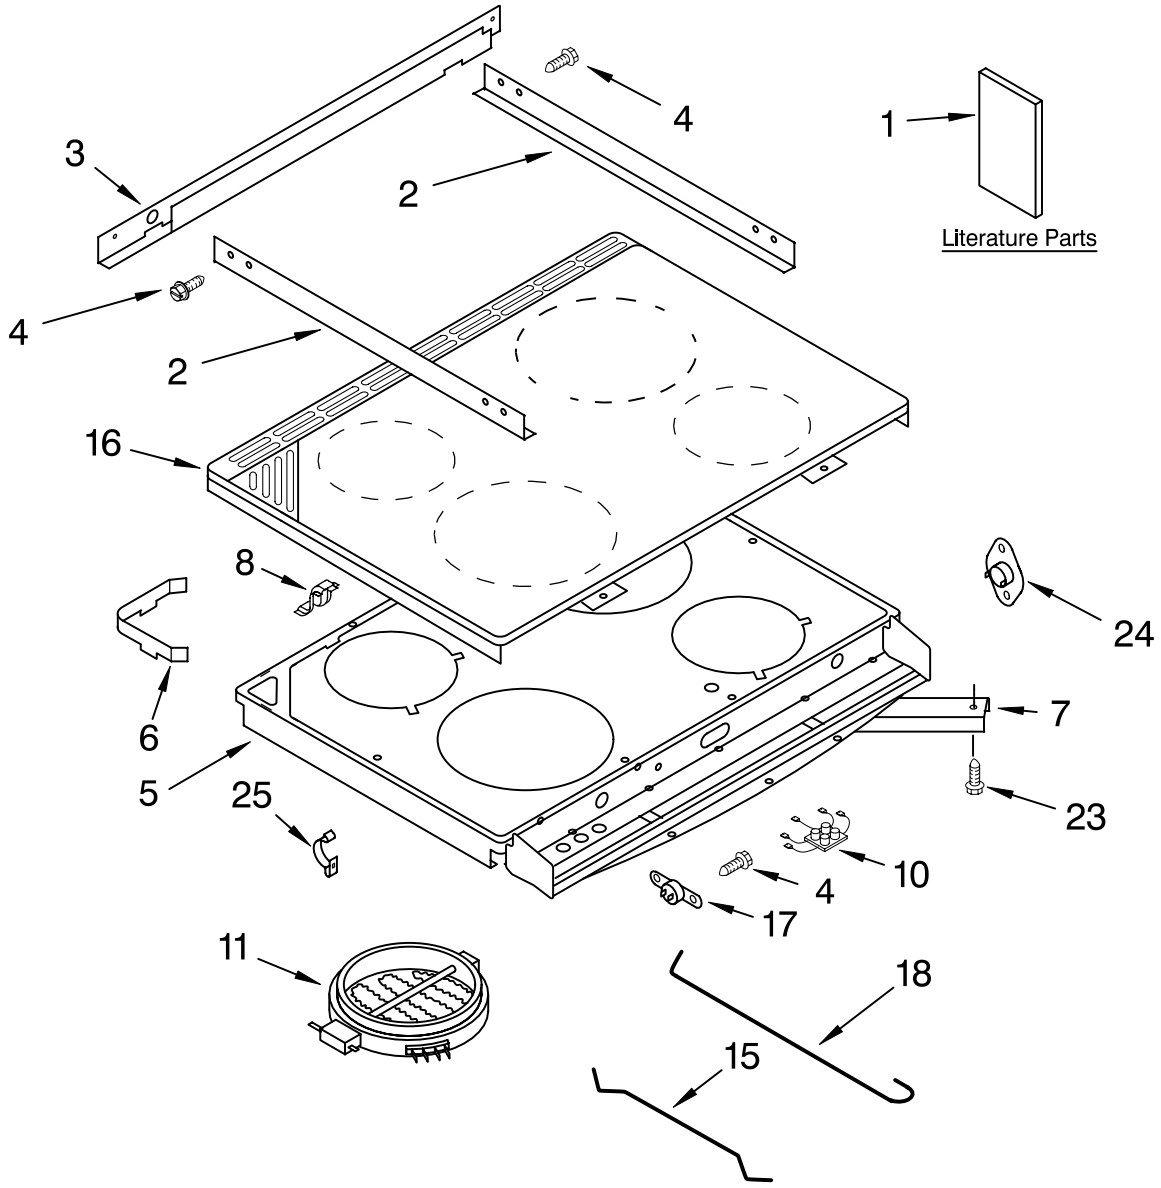

Illus. No.	Part No.	DESCRIPTION
1		Literature Parts
	LIT9752912	Use & Care Guide
	LIT9753268	Back Cover Trim Instructions
	LIT9753911	Wiring Diagram
	LIT9752913	Installation Instructions
	LIT9753914	Tech Sheet
	LIT9753426	Template, Anti−Tip
	LIT3191638	Safer Cooking Tips
2	9752890	Trim, Side (2)
3	9752889	Trim, Back
4	9780265	Screw, 10−16 X 3/8
5	9752892	Support, Element
6	9752869	Sleeve, Vent
7	9781553	Brace, Support
8	9751629	Bracket, Pivot
	9752003	Washer, Privot
10	9781936	Hot Light
11		Element, Surface
	8272564	1500W − LR
	8272565	2500W − LF
	9753997	2200W − RR
	8272566	1800W − RF
15	9781460	Rod, Small Ceran Element
16		Cooktop, Ceran
	9752896CB	Black
	9752896CW	White
	9752896CT	Almond
	9752896CC	Biscuit
17	341196	Thermo Disc
18	9781459	Rod, Large Ceran Element
23	9780272	Screw
24	9751984	Bimetal, Fan
25	98997	Clip, Wire

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

CONTROL PANEL PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

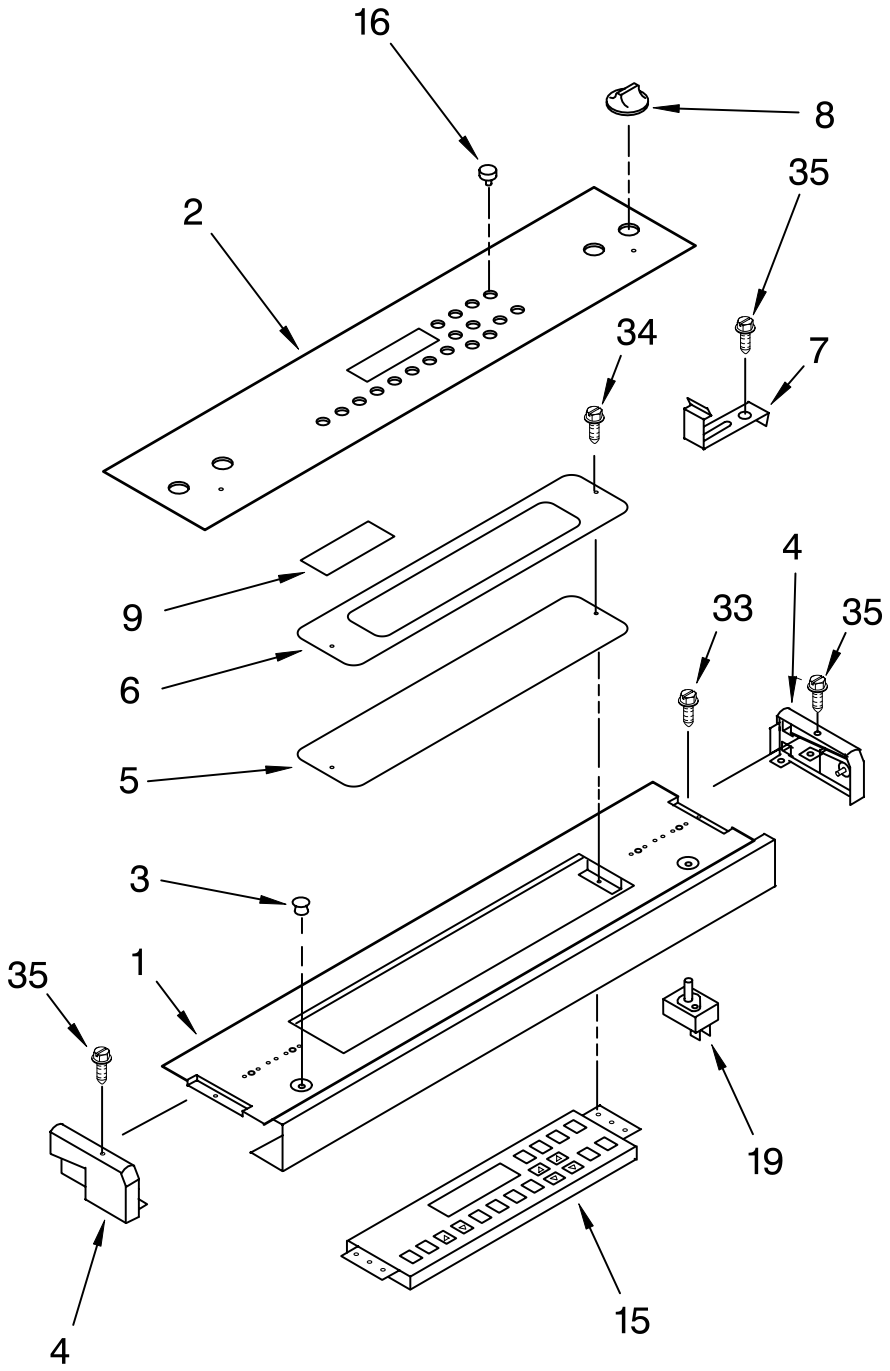

Illus. No.	Part No.	DESCRIPTION
1		Panel, Control
	9752897PB	Black
	9752897PW	White
	9752897PT	Almond
	9752897PC	BIscuit
2		Glass−Console
	9752899CB	Black
	9752899CW	White
	9752899CT	Almond
	9752899CC	Biscuit
3	9780799	Lens, Indic. (2)
4		End Cap
		Left
	9781889FB	Black
	9781889FW	White
	9781889FT	Almond
	9781889FC	Biscuit
		Right
	9781888FB	Black
	9781888FW	White
	9781888FT	Almond
	9781888FC	Biscuit
5	9753504	Gasket, Cover
6	9752955	Cover, Control
7	9752906	Clip, Glass (2)
8		Knobs, Control (4)
	9752405FB	Black
	9752405FW	White
	9752405FT	Almond
	9752405FC	Biscuit
9	9753503	Label−WPSI Control
15	9753633	Control, Range
16		Knob, Timer (18)
	9781954FB	Black
	9781954FW	White
	9781954FT	Almond
	9781954FC	Biscuit
19		Infinite Switch
	9750643	1400W
	9750644	1700W
	9750646	2400W (2)
33	3400816	Screw
34	423247	Screw
35	9780265	Screw
	9781235	Speed Clip

DOOR AND DRAWER PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

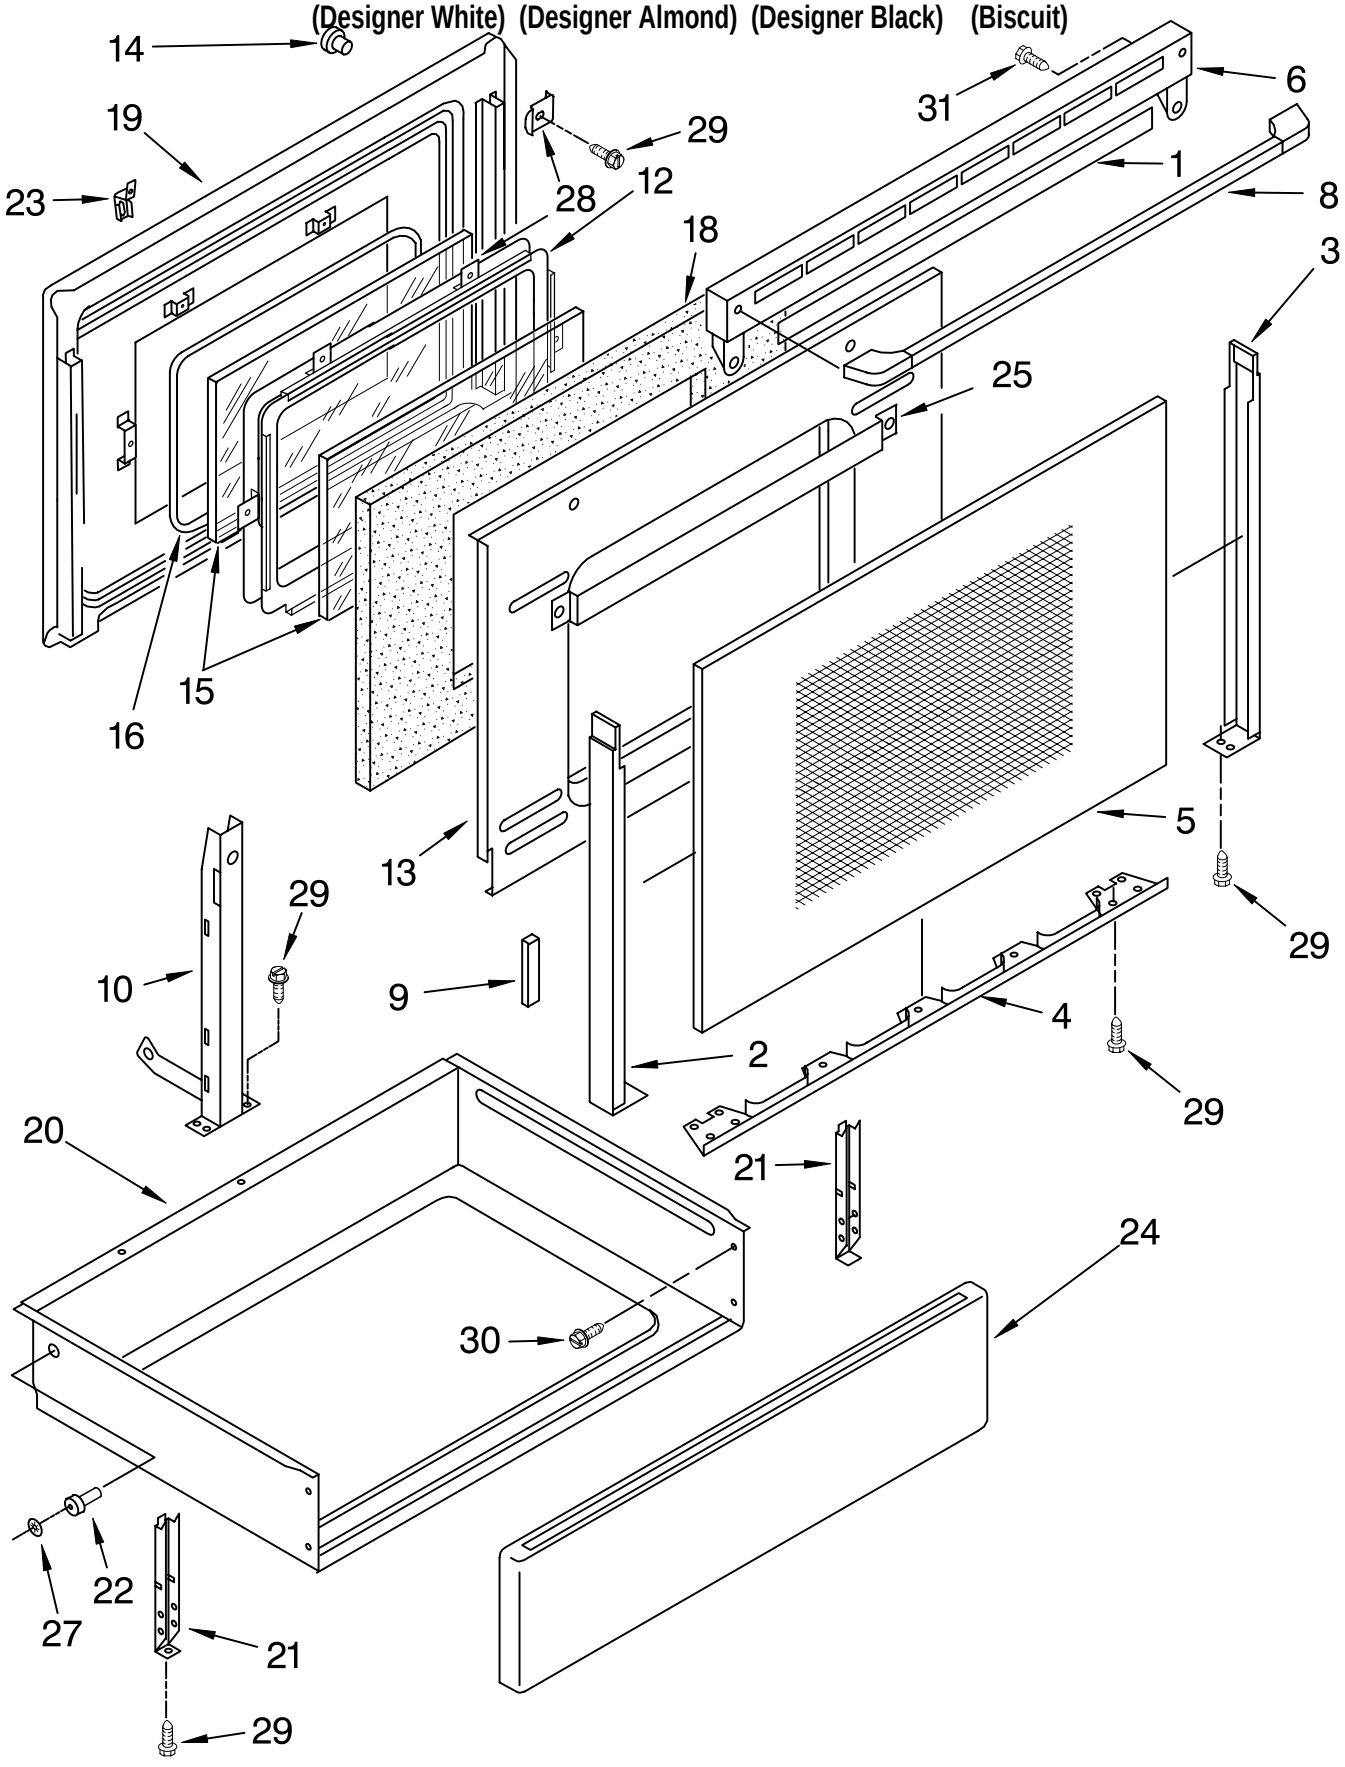

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

DOOR AND DRAWER PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9781659	Gasket,DoorVent
2		Trim, Door−Left
	9782003PB	Black
	9782003PW	White
	9782003PT	Almond
	9782003PC	Biscuit
3		Trim, Door−Right
	9782004PB	Black
	9782004PW	White
	9782004PT	Almond
	9782004PC	Biscuit
4		Trim, Door Bottom
	9781209PB	Black
	9781209PW	White
	9781209PT	Almond
	9781209PC	Biscuit
5		Glass, Door Front
	9781694PB	Black
	9781694PW	White
	9781694PT	Almond
	9781694PC	Biscuit
6		Vent, Door
	9753498GB	Black
	9753498GW	White
	9753498GT	Almond
	9753498GC	Biscuit
8		Handle, Door
	9752701PB	Black
	9752701PW	White
	9752701PT	Almond
	9752701PC	Biscuit
9	9781449	Gasket, Door Glass
10	9750234	Hinge, Door R or L
12	9781602	Frame, Glass
13	9781586	Shield, Door
14	9780771	Bumper, Door
15	9781593	Glass, Pyro (2)
16	9781587	Seal, Window
18	9754006	Insulation, Door
19	9781600GM	Liner, Door
20	9780583	Drawer & Roller
21	9750169	Bracket, Drawer
22	422604	Roller, Drawer
23	9750676	Retainer, Door
24		Front, Drawer
	9750168PW	White
	9750168PT	Almond
	9750168PB	Black
	9750168PC	Biscuit
25	9750693	Heat Channel
27	90296	Clip
28	9781502	Spacer, Door
29	9780265	Screw
30	9780272	Screw
31	9781072	Screw

OVEN CHASSIS PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4

32 (Designer White) (Designer Almond) (Designer Black) (Biscuit)

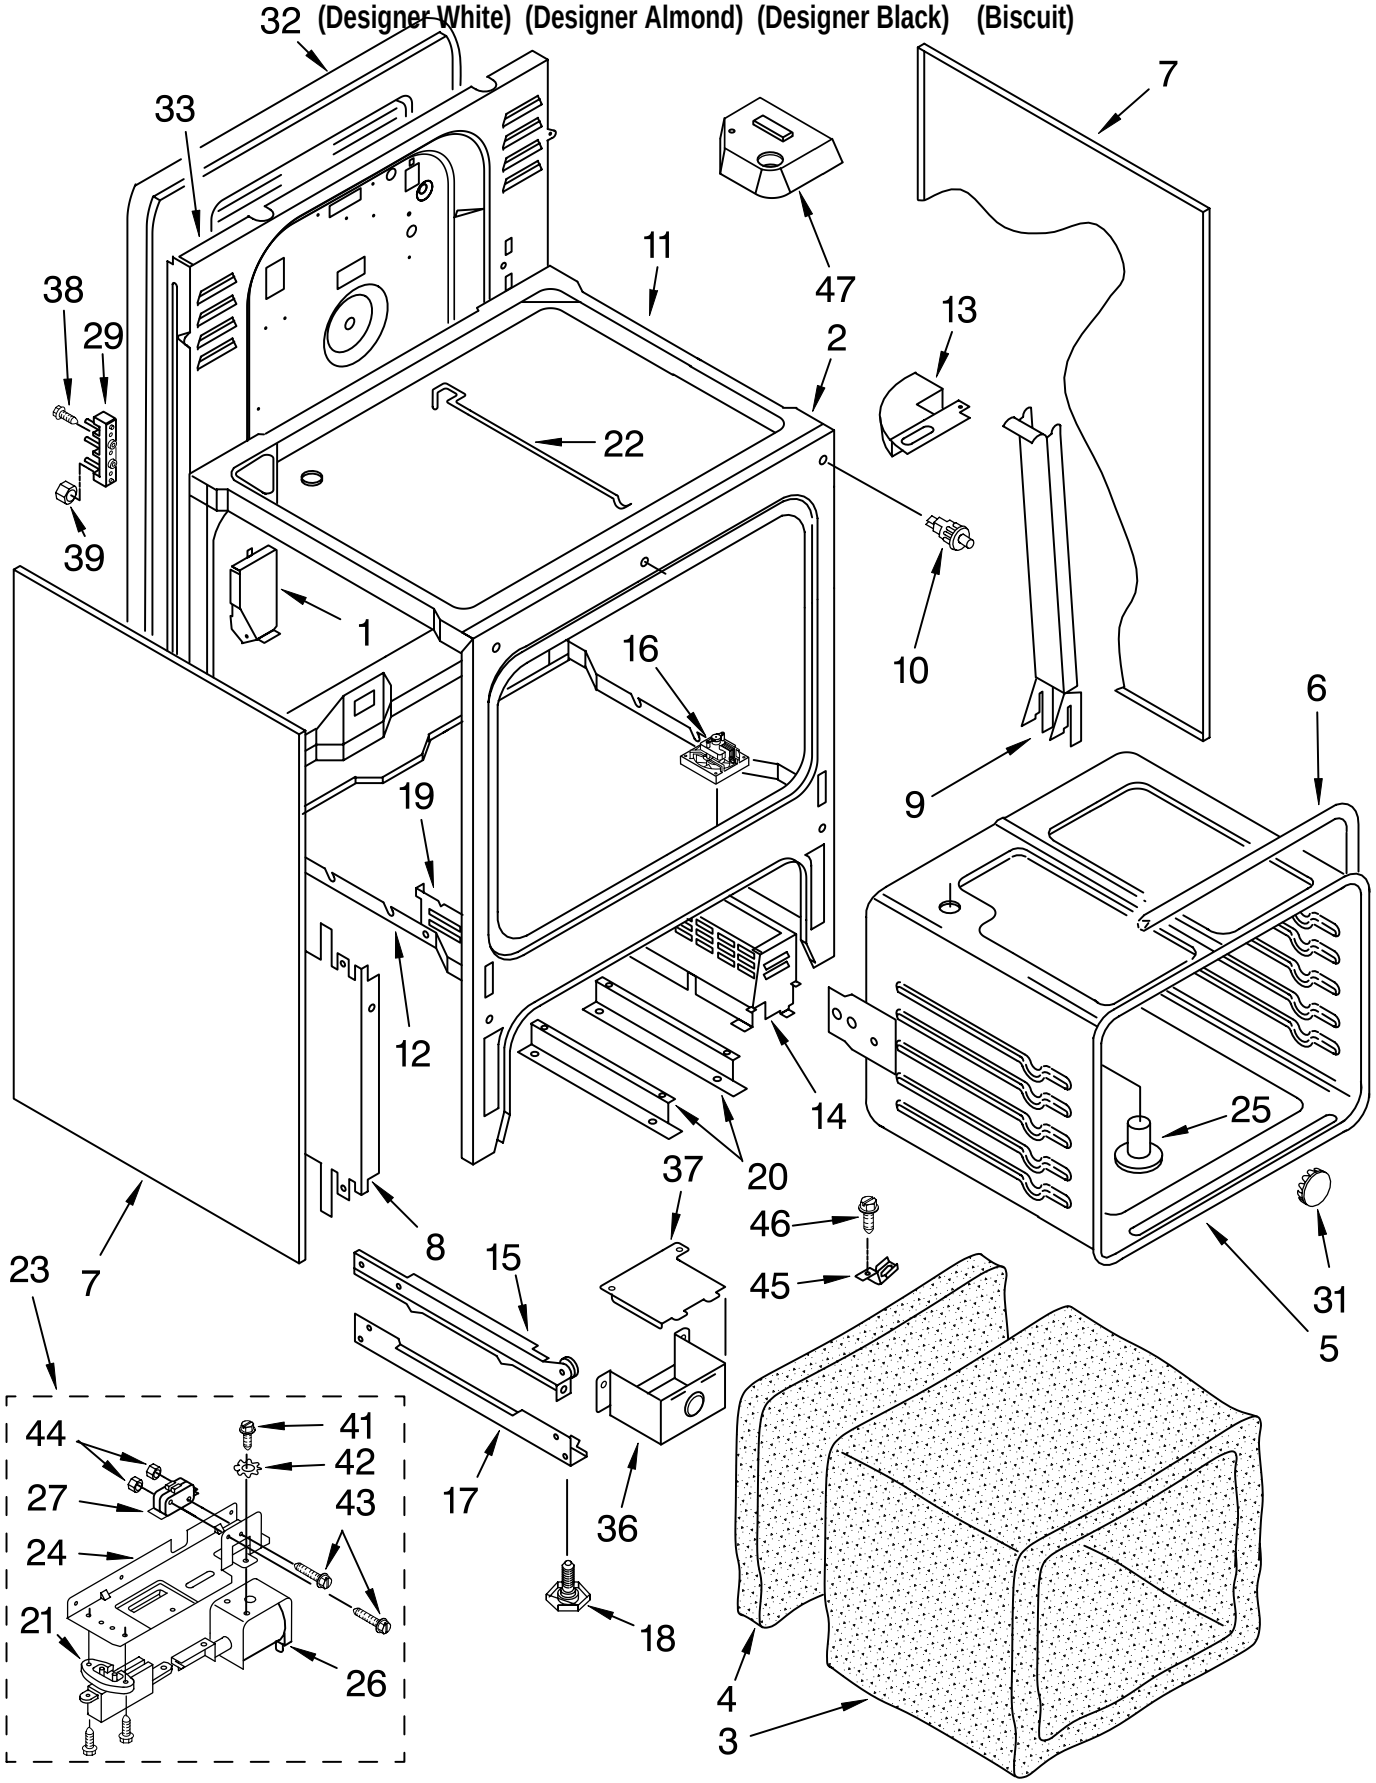

FOR ORDERING INFORMATION REFER TO PARTS PRICE LIST

OVEN CHASSIS PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION
1	9751350	Vent Box, Oven
2	9750514GM	Chassis, Front
3	9754000	Insulation, Wrap
4	9754011	Insulation, Rear
5	9781293GM	Oven Liner
6	3191649	Gasket, Oven
7		Oven , Side Panel
	9781907PW	White, L or R
	9781907PT	Almond, L or R
	9781907PB	Black, L or R
	9781907PC	Biscuit, L or R
8	9780664	Shield, Insulation
	9780265	Screw
9	9751789	Duct, Side Fan
	9780265	Screw
10	9781580	Door Switch
		(Oven Light)
11	9752919	Burner Box
	9780265	Screw
	9780275	Screw
12	9750142	Oven Bottom
	9780265	Screw
13	9751653	Duct, Top
	9780265	Screw
14	9751060	Support, Fan
	9780265	Screw
15	9750223	Drawer Rail, Left
	9750224	Drawer Rail, Right
	9780265	Screw
16	9751020	Motor, Fan
	9751808	Screw
17	9750147	Bottom Rail (2)
	9780265	Screw
18	312701	Foot, (4)
19	9750149	Receiver, Hinge
		(R or L)
	9780265	Screw
	9780272	Screw
20	9781904	Support Rail, Pan (2)
	9780265	Screw
21	9752462	Single Position Device
		(Not Serviced)
22	9750523	Rod, Lock
23	9752404	Oven Lock Assembly
24	9750526	Bracket, Lock
25	9753091	Vent Tube
26	9752409	Solenoid
27	9750965	Switch, Interlock
29	258076	Block, Terminal
31	9780578	Plug, Button
32	9751353	Cover, Rear
33	9751051	Back, Chassis
35	9780265	Screw
36	9752344	Box, Terminal
37	9752345	Cover, Term. Box
38	98884	Screw
39	112432	Nut
41	422222	Screw
42	424238	Washer
43	9750887	Screw
44	9750888	Nut
45	3169573	Strap, Ground
	313660	Clip
46	690989	Screw, Ground
47	9753413	Block, Balance
	340184	Screw

OVEN PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

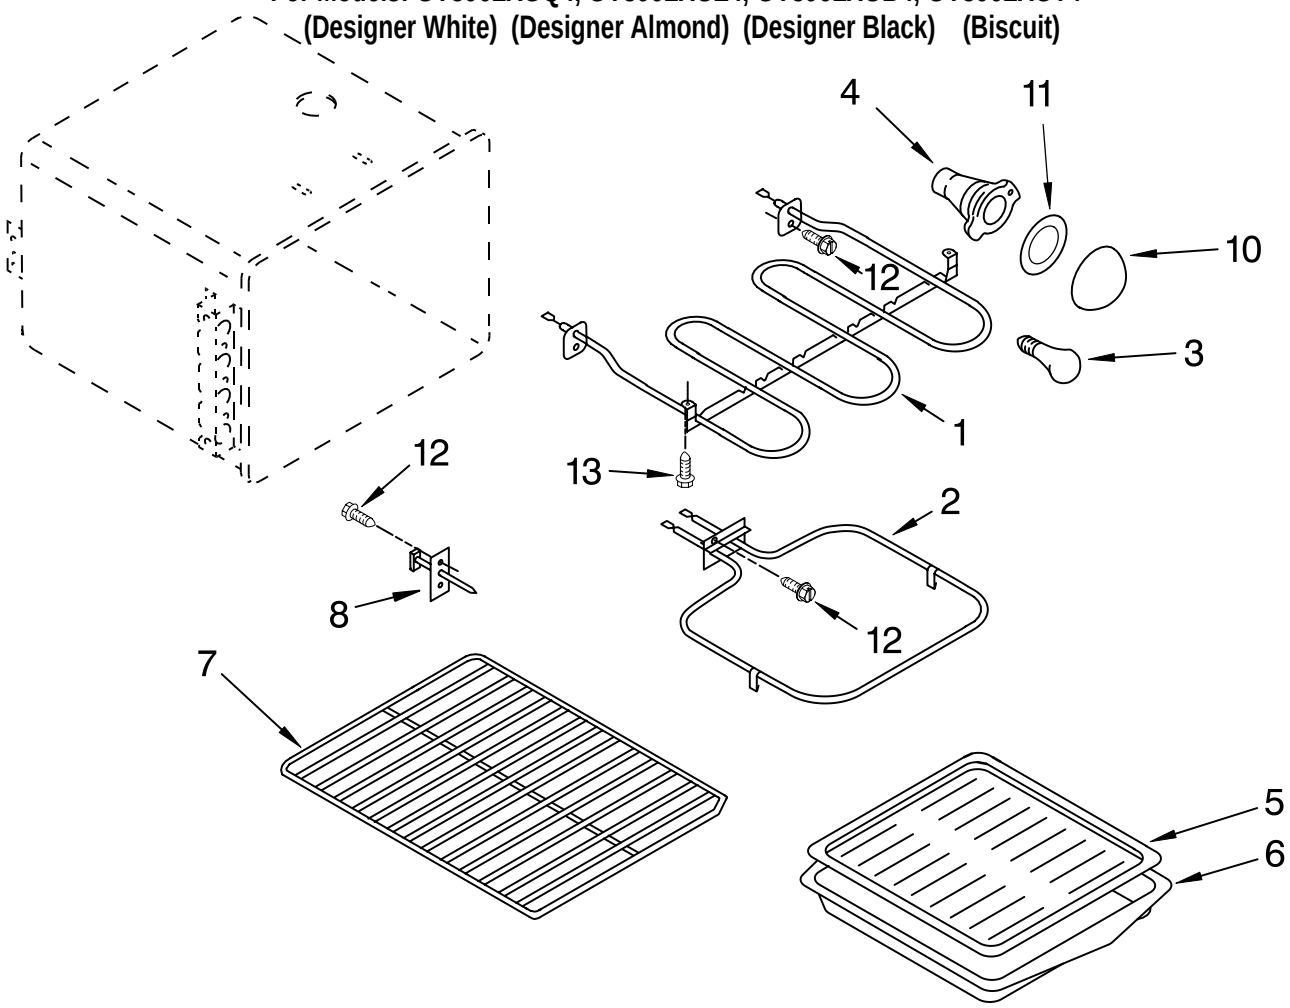

Illus. No.	Part No.	DESCRIPTION
1	9750211	Element, Broil
2	9750213	Element, Bake
3	8935	Bulb, Oven
4	9781050	Light Socket
5	420104GM	Grill, Broiler
6	420101GM	Pan, Broiler
7	9750498	Rack, Standard (2)
8	8053344	Sensor
10	9781049	Lens, Light
11	3184533	Gasket, Lens
12	9781509	Screw
13	340184	Screw

MISCELLANEOUS PARTS

For Models: GY396LXGQ4, GY396LXGZ4, GY396LXGB4, GY396LXGT4
(Designer White) (Designer Almond) (Designer Black) (Biscuit)

Illus. No.	Part No.	DESCRIPTION

SPLICING WIRES−−25FT. LENGTH

242828	Wire, Black 12 Ga. 150°c
242820	Wire, Black 14 Ga. 150°c
242821	Wire, Blue 14 Ga. 150°c
242822	Wire, Brown 14 Ga. 150°c
242830	Wire, Brown 14 Ga. 200°c
242823	Wire, Green 14 Ga. 150°c
242824	Wire, Orange 14 Ga. 150°c
242829	Wire, Red 12 Ga. 150°c
242825	Wire, Red 14 Ga. 150°c
242831	Wire, Red 14 Ga. 200°c
242826	Wire, White 14 Ga. 150°c
242827	Wire, Yellow 14 Ga. 150°c
242832	Wire, Yellow 14 Ga. 200°c

PAINT, TOUCH−UP (1/2oz.)

72017	White
72107	Almond
72109	New Avocado
72108	Coffee
72110	Harvest Gold
**511873	White Porcelain (2 Oz.)
4392899	Biscuit

PAINT, PRESSURIZED SPRAY (12 oz.)

350930	White
350956	Almond
261888	New Avocado
261886	Coffee
261890	Harvest Gold
285006	Superior Black
206922	Primer (White)
4392901	Biscuit

PAINT, BULK (1 qt.)

799344	White (Uncut)
978883	Almond (Uncut)
261891	Harvest Gold (Uncut)
4392900	Biscuit

REFINISHING MATERIAL

799832	Kit, Porcelain Repair (White)
242756	Touch−Up Self−Clean (1/2 Pt.)
261582	Grease
814009	Glass Cleaner
9753543	Creme Cleaner

INSULATION

261514	Insulation, Fiberglass (1−1/2" x 24" x 120")
240132	Insulation, Fiberglass (2−1/2" x 22" x 120")
241430	Foil, Aluminum Oven (18" x 25')

WIRING HARNESS PARTS

9781934	Harness, Wire (Cooktop Ceran)
9781845	Harness, Wire (Inf/Control) (W/Indic Lights)
9753757	Harness, Wire (Main)
9750744	Harness, Wire (Door Switch)
9781767	Harness, Wire (Control)
690989	Screw, Grounding
9751868	Grommet, Harness
20082084	Tie, Wire
90016	Clip, Wire

ANTI−TIP KIT

9751745	Anit−Tip Kit

Miscellaneous

	Trim, Back Cover
9753267PB	Black
9753267PW	White
9753267PT	Almond
9753267PC	Biscuit